
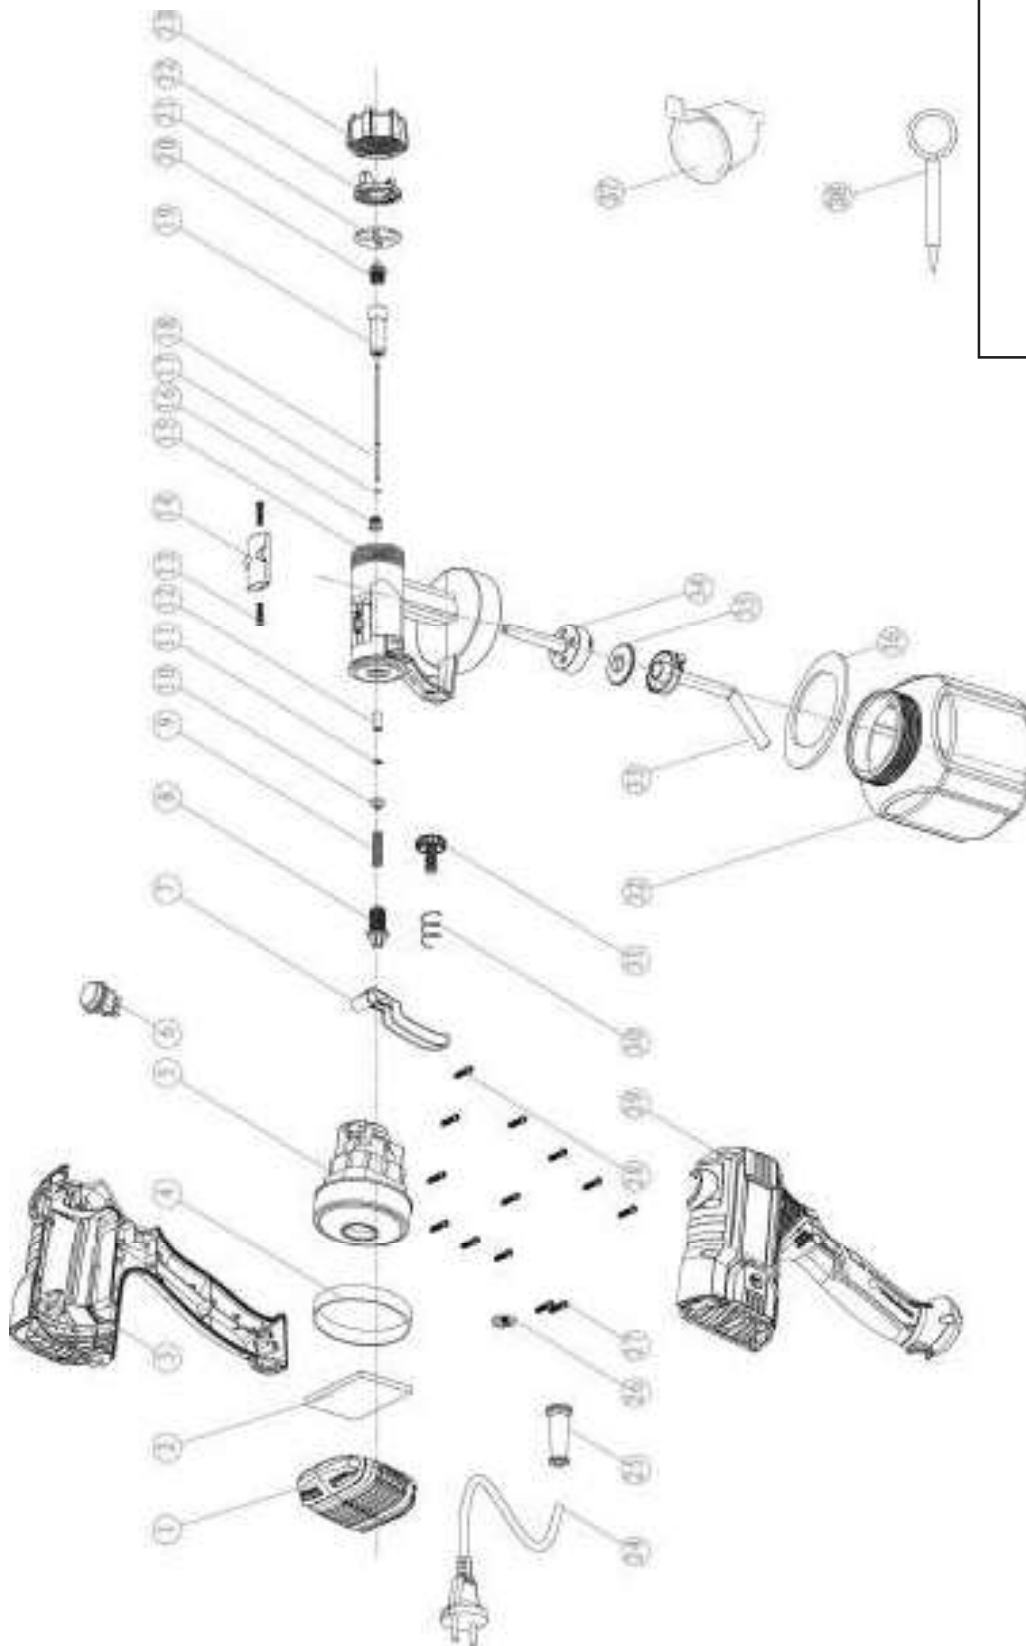


TT3506, UTT3506, TT3506-4, TT3506-6, TT3506-8, TT3506-9, TT3506S Exploded view

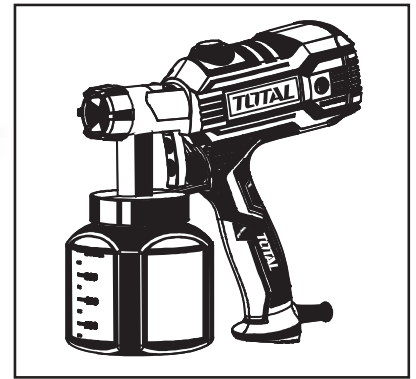

**TT3506,UTT3506,TT3506-4,TT3506-6,
TT3506-8,TT3506-9,TT3506S Spare part list**

No.	Exploding view	Qty
1	air inlet plate	1
2	filter spong	1
3	left shell	1
4	motor seal ring	1
5	motor	1
6	power swtich	1
7	trigger	1
8	spring retainer nut	1
9	thimble spring	1
10	spring retainer	1
11	E-type circlip (φ3)	1
12	thimble guide sleeve	1
13	Screws 3*8	1
14	trigger platen	2
15	rifle rack	1
16	copper nozzle nut	1
17	o ring	1
18	thimble	1
19	nozzle sets	1

No.	Exploding view	Qty
20	nozzle	1
21	tune fog board	1
22	spray plate	1
23	large nut	1
24	power cord	1
25	outlet jacket	1
26	pressure line board	1
27	screws 3*14	1
28	screws 4*14	2
29	right shell	11
30	knob spring	1
31	knob	1
32	plastic pots	1
33	under a straw	1
34	on a straw	1
35	straw seals	1
36	plastic pot ring	1
37	viscosity cup	1
38	cleaning needle	1